



1942 Built Home

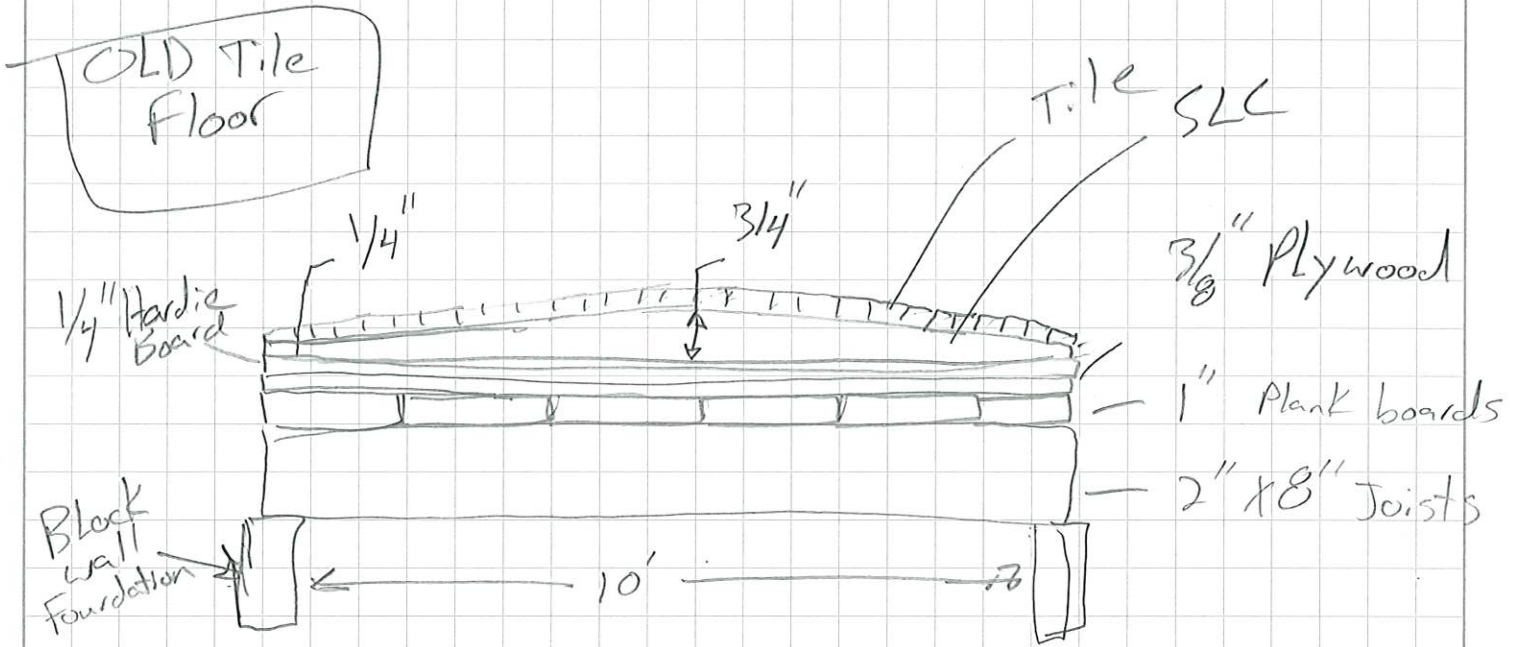


Plank boards & Joists
Look Like OAK

Current
floor
state

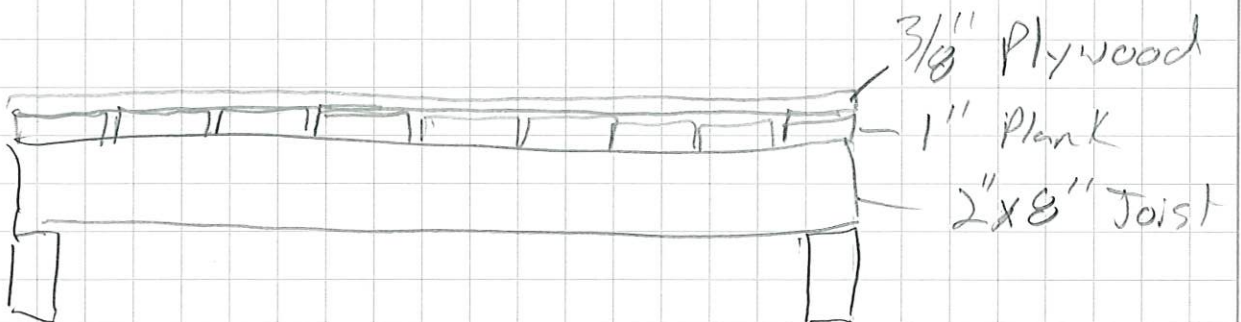

Option 1 - Build up low spot thickness w/
ply wood & use Med set to level

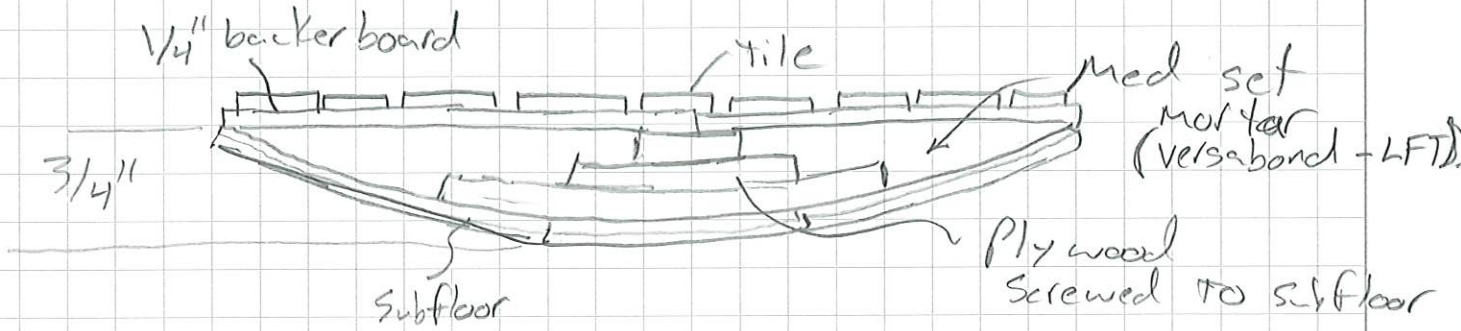

Option #2 - Same as above but use Backer board
to fill in low spots.

